

PLANO DE ESTACIONAMIENTO Y ATRAQUE DE AERONAVES /
AIRCRAFT PARKING/DOCKING CHART


ELEV AD 4.5 M

TWR	118.0
ATIS	127.8
VOR/DME	112.5
APP/CUN	124.7
ARR/CUN	123.2

COZUMEL
AEROPUERTO INTL /
INTL AIRPORT

**CALLES DE RODAJE, ANCHO, RESISTENCIA /
TAXIWAYS, WIDTH, STRENGTH**

TWY	ANCHO / WIDTH	RESISTENCIA / STRENGTH	TIPO / TYPE
A	23 M	20/F/B/Y/T	ASFALTO / ASPHALT
D		60/F/A/X/T	
E		60/F/B/X/T	
F		60/F/B/X/T	

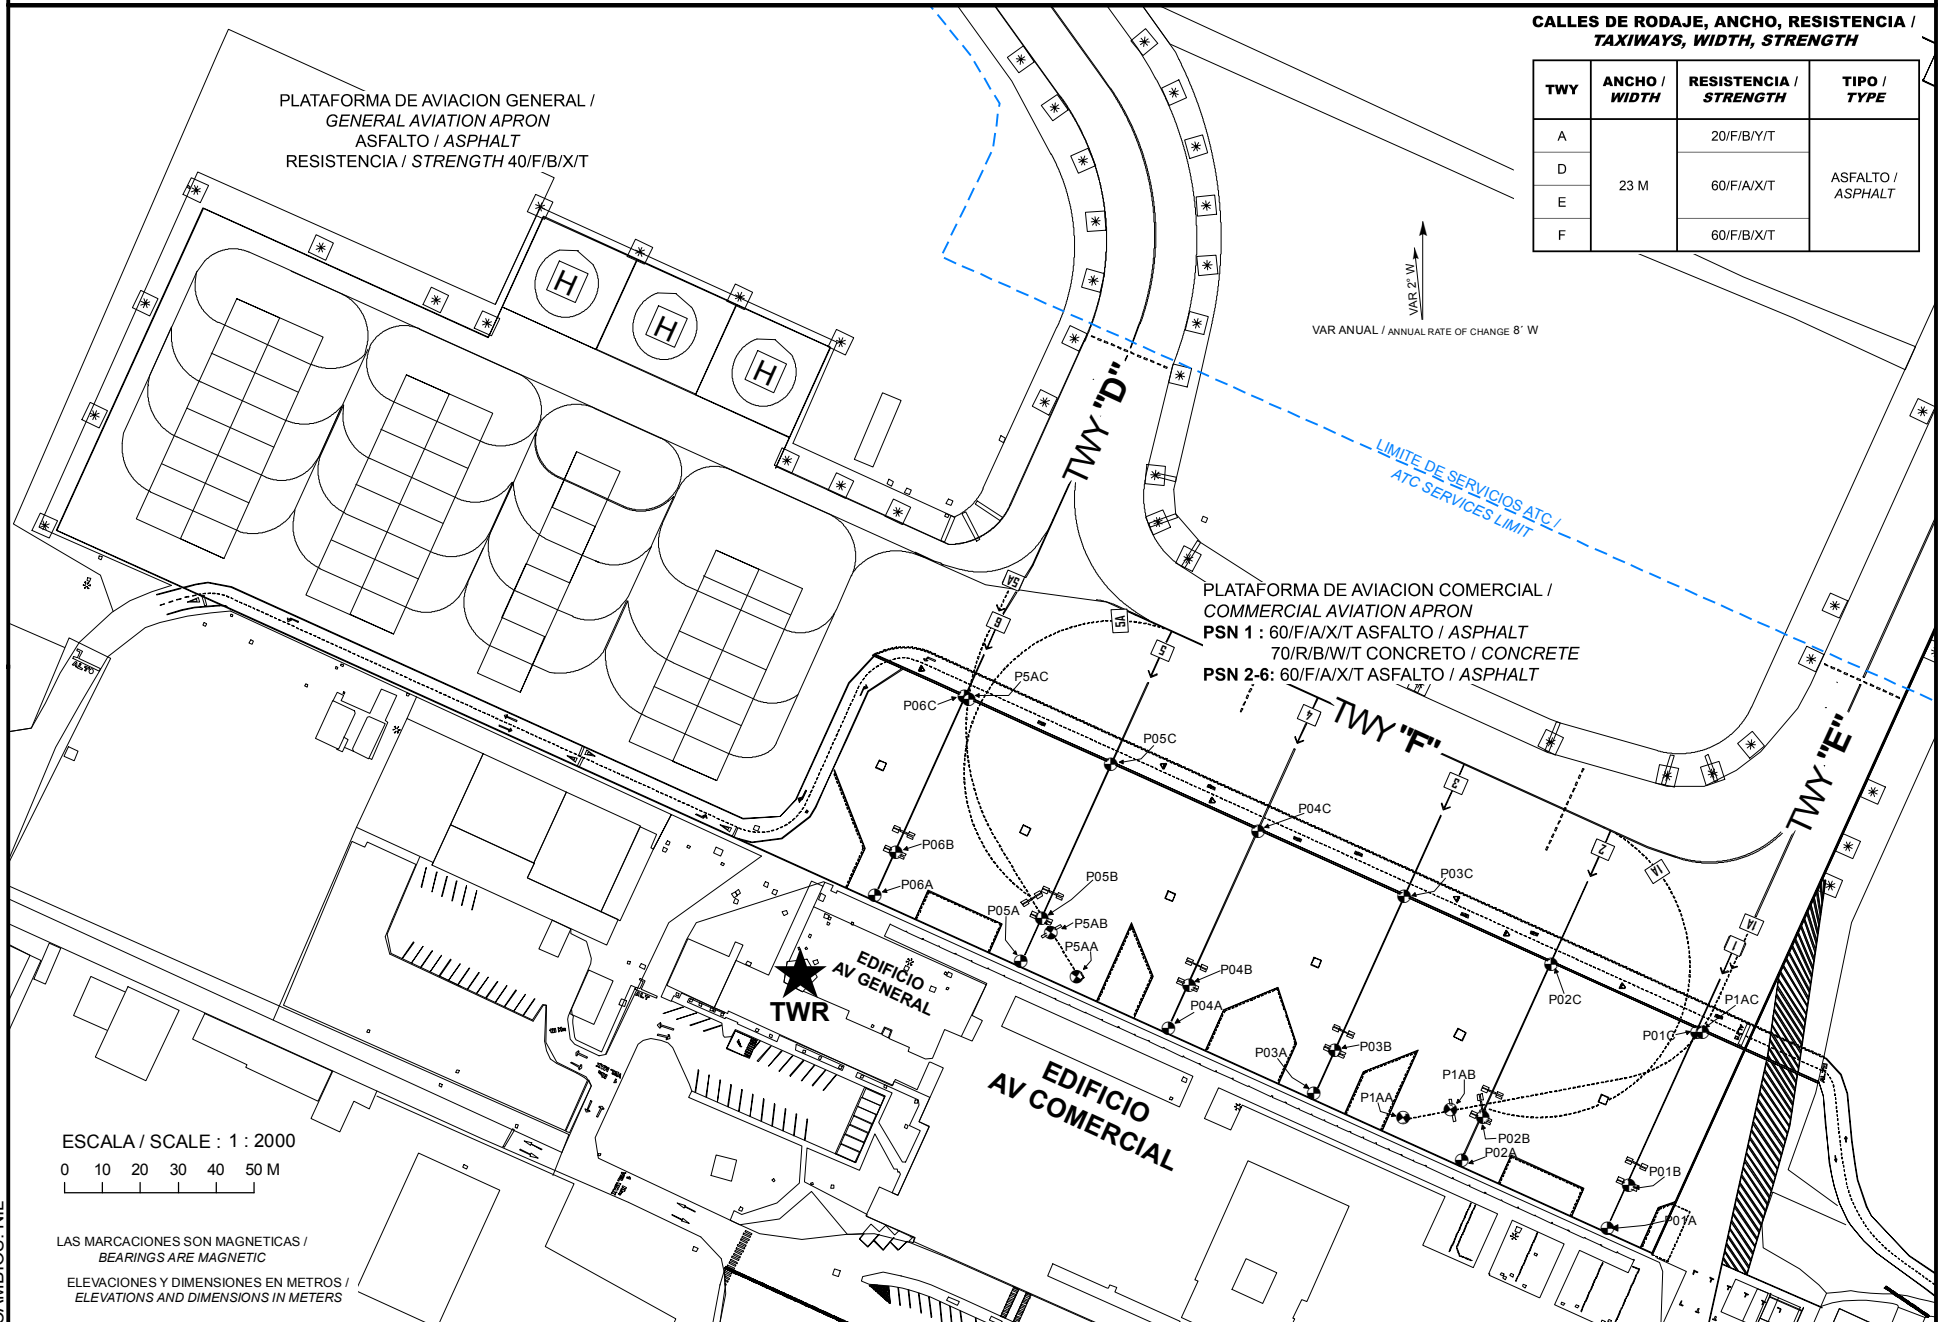

ESCALA / SCALE : 1 : 2000

0 10 20 30 40 50 M

LAS MARCACIONES SON MAGNETICAS /
BEARINGS ARE MAGNETIC

ELEVACIONES Y DIMENSIONES EN METROS /
ELEVATIONS AND DIMENSIONS IN METERS

CAMBIOS: NIL

**COORDENADAS INS DE PUESTOS DE ESTACIONAMIENTO DE AERONAVES AVIACION COMERCIAL /
COORDINATES INS, FOR AIRCRAFT STANDS, COMMERCIAL AVIATION**

PSN	LAT (N)	LONG (W)	ELEV (M)	
P01	P01A	20° 30' 41.38"	086° 55' 45.33"	4
	P01B	20° 30' 41.75"	086° 55' 45.14"	4
	P01C	20° 30' 43.02"	086° 55' 44.49"	4.5
P01A	P1AA	20° 30' 42.32"	086° 55' 47.11"	4
	P1AB	20° 30' 42.39"	086° 55' 46.64"	4
	P1AC	20° 30' 43.00"	086° 55' 44.46"	4.5
P02	P02A	20° 30' 41.96"	086° 55' 46.59"	4
	P02B	20° 30' 42.32"	086° 55' 46.40"	4
	P02C	20° 30' 43.59"	086° 55' 45.75"	4.5
P03	P03A	20° 30' 42.52"	086° 55' 47.85"	4
	P03B	20° 30' 42.89"	086° 55' 47.66"	4
	P03C	20° 30' 44.16"	086° 55' 47.01"	4.5
P04	P04A	20° 30' 43.10"	086° 55' 49.11"	4
	P04B	20° 30' 43.46"	086° 55' 48.92"	4
	P04C	20° 30' 44.73"	086° 55' 48.27"	4.5
P05	P05A	20° 30' 43.67"	086° 55' 50.37"	4
	P05B	20° 30' 44.04"	086° 55' 50.18"	4
	P05C	20° 30' 45.30"	086° 55' 49.53"	4.5
P05A	P5AA	20° 30' 43.51"	086° 55' 49.84"	4
	P5AB	20° 30' 43.93"	086° 55' 50.09"	4
	P5AC	20° 30' 45.84"	086° 55' 50.73"	4.5
P06	P06A	20° 30' 44.24"	086° 55' 51.63"	4
	P06B	20° 30' 44.61"	086° 55' 51.44"	4
	P06C	20° 30' 45.87"	086° 55' 50.79"	4.5